

4110

Wireless Optiscan set acoustic

03-11-2014 - V3.0



User Manual

General:

This wireless Optiscan detects when a person intends to leave the bed. This Optiscan works in combination with the corresponding Daza receiver which will sound an acoustic signal during the alarm.

Installation and use:

Insert the adaptor into a power socket and the receiver is ready to use (figure 1).

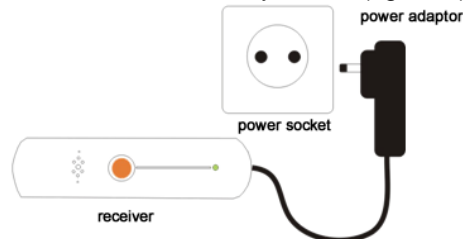


Figure 1: Receiver

Optiscan placement:

Place the sensor on the floor, facing the bed (figure 2). Make sure that the sensor is placed safely where it can cause no harm to the inhabitant, for example underneath a chair or table. **It is highly preferable to place it at a distance of at least 2 meters from the bed.** The sensor has a 90 degrees field of view over a distance of approximate 7 meter. Make sure that no objects are in front of the sensor that can block its view (figure 3).



Figure 2: Sensor placement

Switching on:

1. The sensor is always on, you need to switch on the receiver in order to receive the alarms (press the orange button).
2. Leave the room.
3. The sensor switches itself on automatically once **no** movement across the floor has been detected for fifteen seconds.



Figure 3: Viewing angle sensor

Confirm alarm:

1. You can confirm the acoustic alarm by pressing the orange button once.

Switching off:

1. You can switch off the receiver by pressing the orange button once.
2. If there is an acoustic alarm, you need to confirm this alarm first before you can switch off the receiver.

Between detection of movement and activation of the transmitter there is a delay of 2 seconds. This gives you the chance to deactivate the sensor before the transmitter is activated. It is possible to extend this delay by an extra 3 or 5 seconds. You can do this by moving jumper 2 to position three or five (figure 4).

4110

Wireless Optiscan set acoustic

03-11-2014 - V3.0



User Manual

Battery empty warning:

When the Optiscan battery is almost empty, you get the 3 following messages:

- The LED behind the Optiscan lens blinks red every 5 seconds
- The LED in the receiver blinks red every 2 seconds
- The receiver beeps 4 times when switching on an off.

Battery replacement:

Only replace this with a 3.6 volt lithium cell of size 2/3 AA.

Correct operation can only be guaranteed when an original battery of the brand Saft, type LS17330 is used (Daza partnumber 7083).

Remove the 4 screws on the rear of the Optiscan housing. Replace the battery in accordance with Fig. 3. Please note: Plus (+) pole on the right side. After closing the Optiscan the sensor will require some time to calibrate. This is shown by the frequently illumination of the green LED behind the lens.

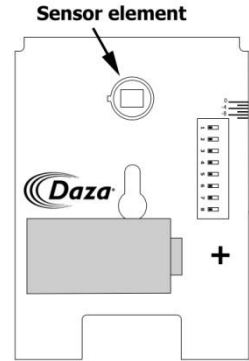


Figure 4: Battery placement

NEVER TOUCH THE ELEMENT IN THE SENSOR!

Serial number / Set indication:

The serial numbers on both components of the set are the same. This indicates that the transmitter and the receiver belong to each other. Components of different sets are not interchangeable.



Figure 5: Serial numbers

Entrance delay.

Standard between the detection of a movement and a transmission is a delay of 1 sec.

This delay gives you the time to switch off the receiver so that no alarm is received.

It is possible to change this time into 3, 5 or 10 seconds.

You can do this by changing dipswitch 1 and/or 2.



1 second (default)



3 seconds




5 seconds



10 seconds

Factory default settings

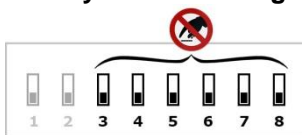

Switch 3 to 8 should **NEVER** be changed!!

When changes are made, correct operation of the sensor can NOT be guaranteed.