

1184 / 1184-RED

Pendant / Wrist trigger

2014-04-29 - V1.0



User Manual

General:

When the button is pressed, an alarm will follow and the red LED will light up. The trigger is available in anthracite and red and can be worn around the neck with supplied cord. There is also an option to wear this sensor around the wrist using article 1184-Strap. To mount this trap there is no need to open the casing of the trigger. The soft fabric wrist strap can simply be slide into the backside. The trigger can work in combination with the Daza receivers and the Daza pagers*.

Operation:

The trigger is activated by a button press, which result in a single alarm transmission regardless of how long the button is pressed. The trigger is water and dust proof (IP67) and can therefore be worn in the shower.

During the transmission a unique ID is transmitted which can only be received by the Daza receivers and Pagers*. It is necessary that the trigger is paired with the receiver. Please refer to the corresponding manual of the receiver.

A red LED will light up when the button is pressed, indicating that the alarm is successfully transmitted (figure 1).

A blinking LED after a button press indicates that the battery is almost empty and that it needs to be replaced as soon as possible. During the alarm transmission the battery notification is also transmitted to the receivers or pagers.

The trigger has the standard neckstrap supplied which contains a safety clasp. A small amount of pressure on the cord will result that the cord opens. This is done to prevent injuries (figure 2).

Battery:

The power supply for the transmitter is provided by a 3 volt lithium cell, type CR2032.

The battery has a lifetime of approximate 32,000 calls. Opening the pendant transmitter to replace the battery is done by removing the three screws on the back. Now, the rear frame can be removed and then the housing can be opened.

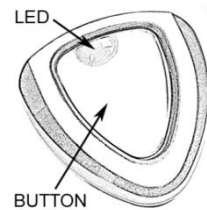


Figure 1: Button + LED

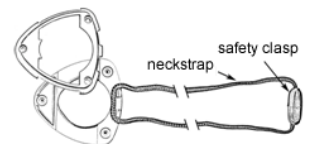


Figure 2: Neckstrap